



FORSYTH GLAZING LIMITED



30 Tobago Street, Glasgow G40 2RH T. 0141 554 0011 F. 0141 554 0088
E. sales@forsythglazing.co.uk www.forsythglazing.co.uk



MORE THAN JUST GLASS

48mm TUBULAR STAINLESS STEEL BALUSTRADE with GLASS PANELS

All components are stocked at our Glasgow factory and we offer both a “supply only” or “supply and fit” service. We are a leading supplier with over 40 years experience and here to assist with your project. We look forward to hearing from you soon or receiving your enquiry.

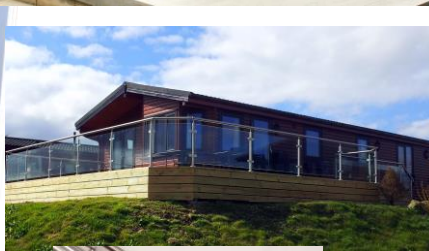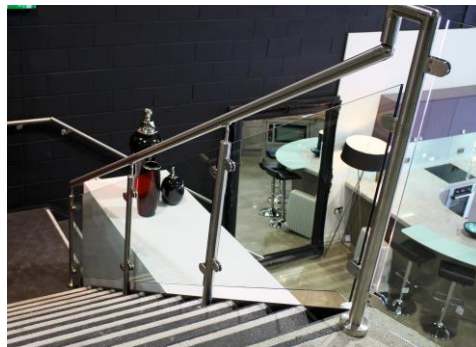

PRODUCT DETAILS & ASSEMBLY

TUBULAR STAINLESS STEEL

- [1] Posts, Handrails & Fittings – 48mm diameter brushed stainless steel
- [2] Grades – 304 (Internal) & 316 (External)
- [3] Posts – supplied with base plates welded in position
- [4] Posts & Handrails – Options [a] supplied cut to size [b] cut on site [c] site size/mark and we cut
- [5] Base plate – 2no 11mm dia. holes & 2no 5mm dia. holes all at 75mm centres
- [6] Base fixings – depends if timber, concrete or steel. Fixings by others.
- [7] Glass – 10 or 12mm toughened
- [8] Glass clamps - fitted to posts with M8 socket head screws. Posts are pre-drilled and tapped to accept the socket screw.
- [9] Push/Fit joints – glued with Wurth thread locker. Joints must be thoroughly cleaned and dried, apply glue evenly wiping off any excess. Propping/taping of joints recommended so joints don't open. Set joints with a hot air gun.
- [10] Support Tube – handrail should be drilled [5.5mm dia.] and tapped [6mm dia.] to accept a stainless steel machine screw [by others]
- [11] Support Pins – must be used in glass clamps where glass panels are out with/overhang past a staircase, floor, landing or similar

MAINTENANCE

Stainless steel is not generally maintenance free. A light and regular wash is best to remove deposits (such as salt) which can cause corrosion. As a guide, stainless steel should be washed if the glass requires cleaned. For best results wash with warm soapy water, rinse well and wipe dry. **## It is essential that abrasive cleaners or those containing chlorides or bleach are not used as they will damage the surface ##**

REGULATIONS

We advise you check with Building Control for local rules and regulations

See “Product Installation Videos” on our web site for “How To Fit A Glass Balustrade System”

We are here to assist with the components required
and look forward to receiving your next enquiry

Forsyth Glazing Ltd

30 Tobago Street, Glasgow, G40 2RH

Tel 0141-554-0011 Fax 0141-554-0088

Email sales@forsythglazing.co.uk Web www.forsythglazing.co.uk